

## SELECTING THE CORRECT PAPER TYPE

The printer automatically adjusts itself for the type of paper you select in your print settings. That is why the paper type setting is so important. It tells your printer what kind of paper you are using and adjusts the ink coverage accordingly. The table below lists the settings you should choose for your paper.

Grams	Surface	Size	Use	Paper Printing Setting ——Epson L1800
115g/m <sup>2</sup>	Cast Coated	A4	Printing color leaflets such as text documents	Epson Photo Paper Glossy
135g/m <sup>2</sup>	Cast Coated	A4		
150g/m <sup>2</sup>	Cast Coated	A4		
180g/m <sup>2</sup>	Cast Coated	A4	Printing all kinds of color photos and pictures	Epson Premium Glossy
200g/m <sup>2</sup>	Cast Coated	A4		
230g/m <sup>2</sup>	Cast Coated	A4		
120g/m <sup>2</sup>	2-Sides Cast Coated	A4	Printing color album	Epson Photo Paper Glossy
140g/m <sup>2</sup>	2-Sides Cast Coated	A4		
160g/m <sup>2</sup>	2-Sides Cast Coated	A4		
180g/m <sup>2</sup>	2-Sides Cast Coated	A4	Printing color desk calendar, menu, etc	Epson Premium Glossy
200g/m <sup>2</sup>	2-Sides Cast Coated	A4		
240g/m <sup>2</sup>	2-Sides Cast Coated	A4	Printing double-sided color cards	
260g/m <sup>2</sup>	2-Sides Cast Coated	A4		
280g/m <sup>2</sup>	2-Sides Cast Coated	A4		
300g/m <sup>2</sup>	2-Sides Cast Coated	A4		
108g/m <sup>2</sup>	Matte Coated	A4	Both for dye and pigment ink and printing color documents and artwork design	Epson Premium Semiglossy
128g/m <sup>2</sup>	Matte Coated	A4		
120g/m <sup>2</sup>	2-Sides Matte Coated	A4		
140g/m <sup>2</sup>	2-Sides Matte Coated	A4		
230g/m <sup>2</sup>	2-Sides Matte Coated	A4	Both for dye and pigment ink and printing invitations, business cards, etc	
250g/m <sup>2</sup>	2-Sides Matte Coated	A4		
240g/m <sup>2</sup>	Resin Coated Glossy	A4	Both for dye and pigment ink and printing art photos, wedding photos, etc	Epson Premium Glossy
240g/m <sup>2</sup>	Resin Coated Satin	A4		
260g/m <sup>2</sup>	Resin Coated Glossy	A4		
260g/m <sup>2</sup>	Resin Coated Satin	A4		